

K335S8 38*38mm Double Board Wiring Manual v4.0

Interface definition:

Default factory configuration:

IP: 192.168.1.168

PW: 123456

Rtsp://192.168.1.168/stream_0

Network power interface:

- 1.DC12V
- 2.GND
- 3.RJ45_1(TX+)
- 4.RJ45_2(TX-)
- 5.RJ45_3(RX+)
- 6.RJ45-6(RX-)
- 7.Link Lamp
- 8.ACT Lamp

Function interface:

- 1.Audio In
- 2.Audio Out
- 3.GND
- 4.Reset
- 5.GND
- 6.Alarm Out
- 7.GND
- 8.Alarm In
- 9.RS485_A
- 10.RS485_B

Debug interface:

1. 3V3
2. UART0_TX
3. UART0_RX
4. GND

USB Interface:

1. 5V Out
2. USB_DM
3. USB_DP
4. GND

IR-CUT interface:

- 1.IR-CUT 1
- 2.IR-CUT 2

Infrared light board interface:

- 1.Light board control signal input
- 2.GND
- 3.Constant Current IC PWM

Auto IRIS Lens Interface:

1. Driver-
2. Driver+
3. Damp+
4. Damp-

